


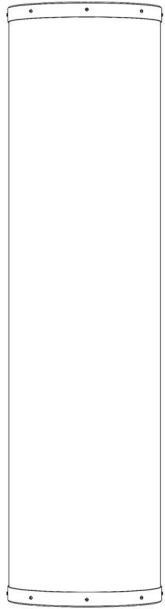


Installation


Remove plastic sleeve




Install prefilter with supplied elastic bands. Ensure that the prefilter covers the perforated steel completely

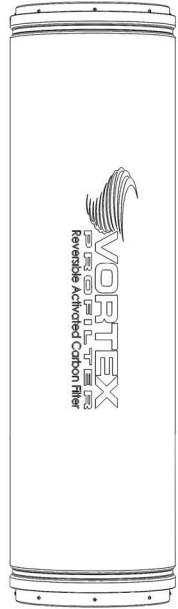

Install the twist lock flange and end cap

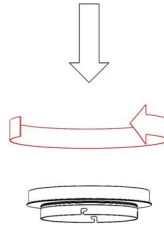

Install the fan in the flange

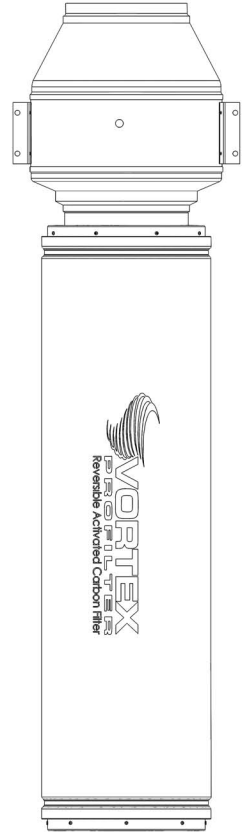

Typical Installations

